

KLOSS

ADJUSTING THE OPENING ANGLE OF THE LID

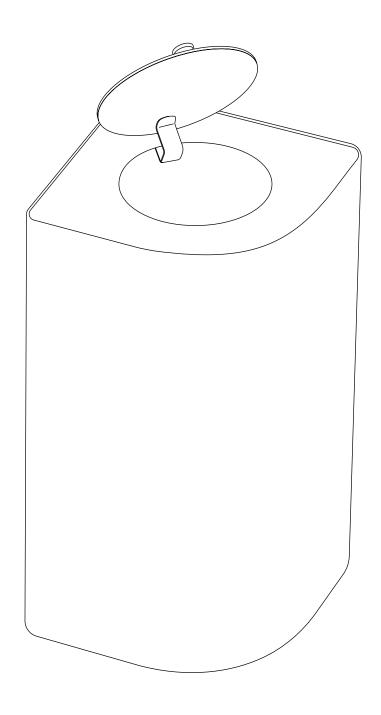



ADJUSTING THE OPENING ANGLE OF THE LID

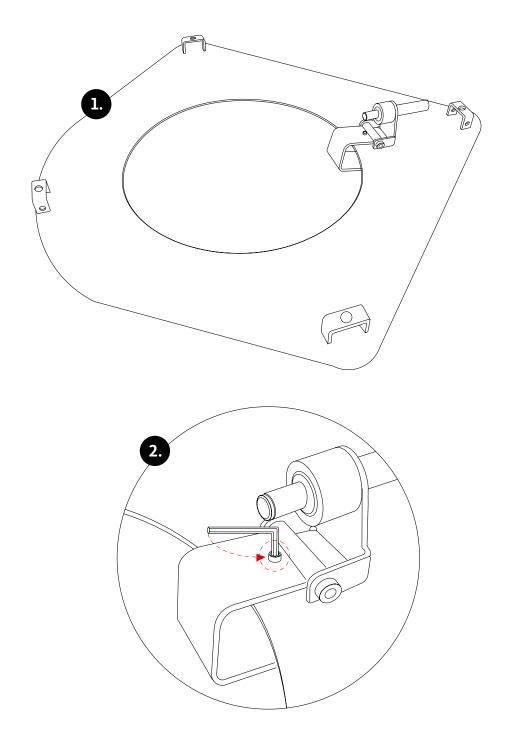

- 1. Turn the lid over and use the supplied Allen key (2 mm) to adjust the stop screw.
- 2. Thighten the stop screw to reduce the opening angle of the lid and unscrew to increase the angle.