
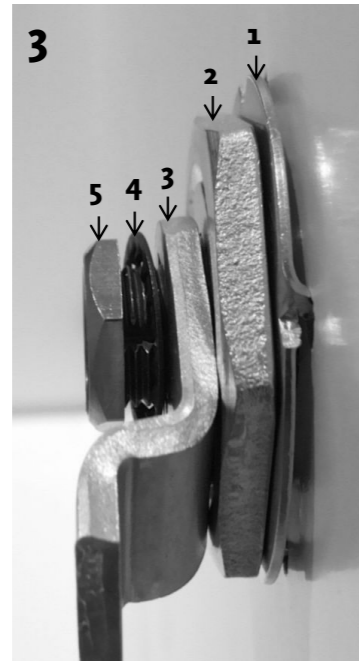
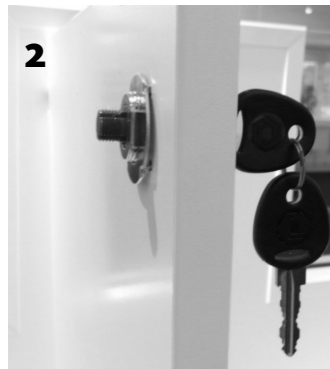
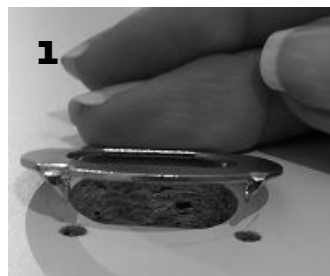


AFTER MOUNT LOCKS


Pair doors	A	B	C
Door height	A	B	C
349	38	324	25
525	38	500	25
701	38	676	25
1035	38	1010	25
1053	38	1028	25
1129	38	1104	25
1405	744	661	25
1757	1096	661	25
2109	1448	661	25

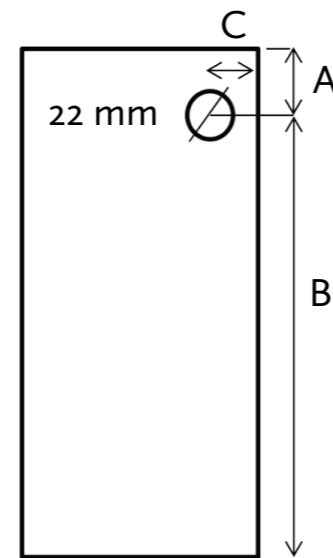

Drill for placement of lock cylinder according to dimensions in table.

- 1 - Pre-drill for mounting of nail plate (1) on the inside of the door
- 2 - Install lock cylinder
- 3 - Install the nut (2), lock lip (3), lock washer (4) and nut (5).

AFTER MOUNT LOCKS

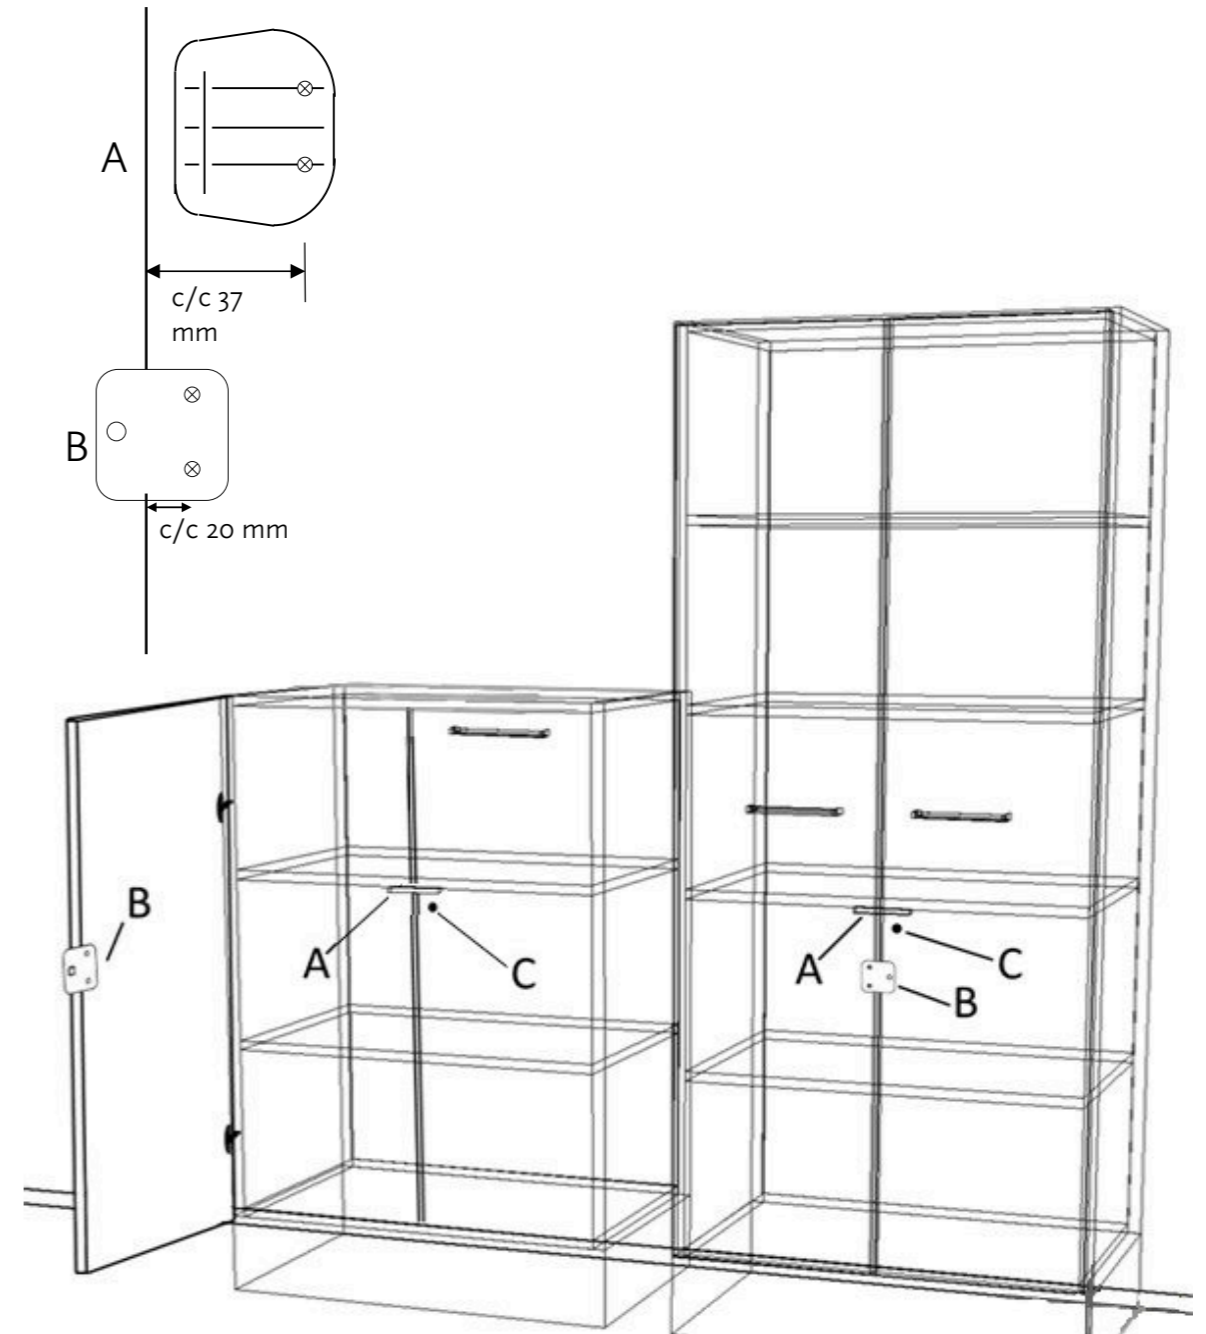

Pair door:

Lock stop (A) is mounted (x2 wood screws) under the 3:rd shelf, or under top if the unit only has 3 shelves.

Lock plate (B) is mounted (x2 wood screw) centered on the inside of door without lock cylinder. NOTE the lock plate should not be mounted at the same height as the shelves.

Lock cylinder (C) See other page for dimensions and mounting.