



MOUNT HERE 6

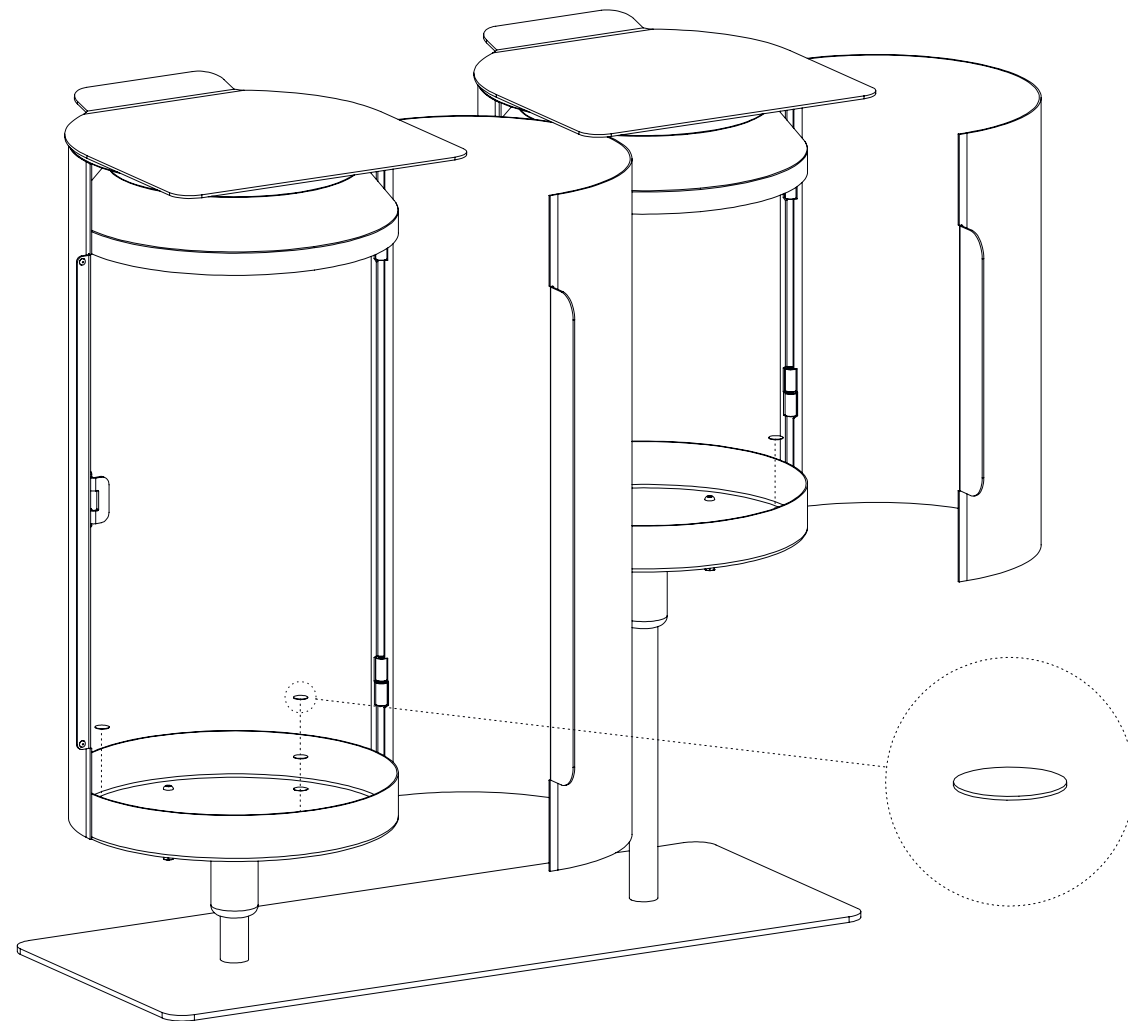


Apply the enclosed waterproof adhesive patches to the base of the bin/bins (3 per bin) over the holes that are not used, for a sealed base.

BIRDIE WITH FLOOR STAND

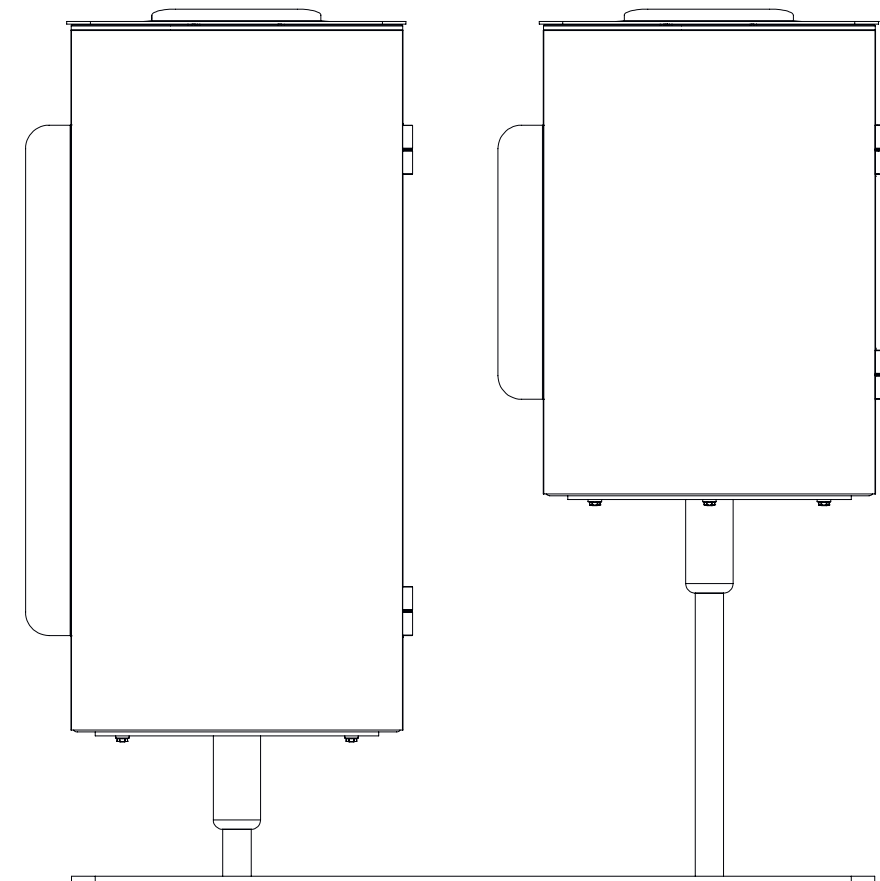


COMPONENTS

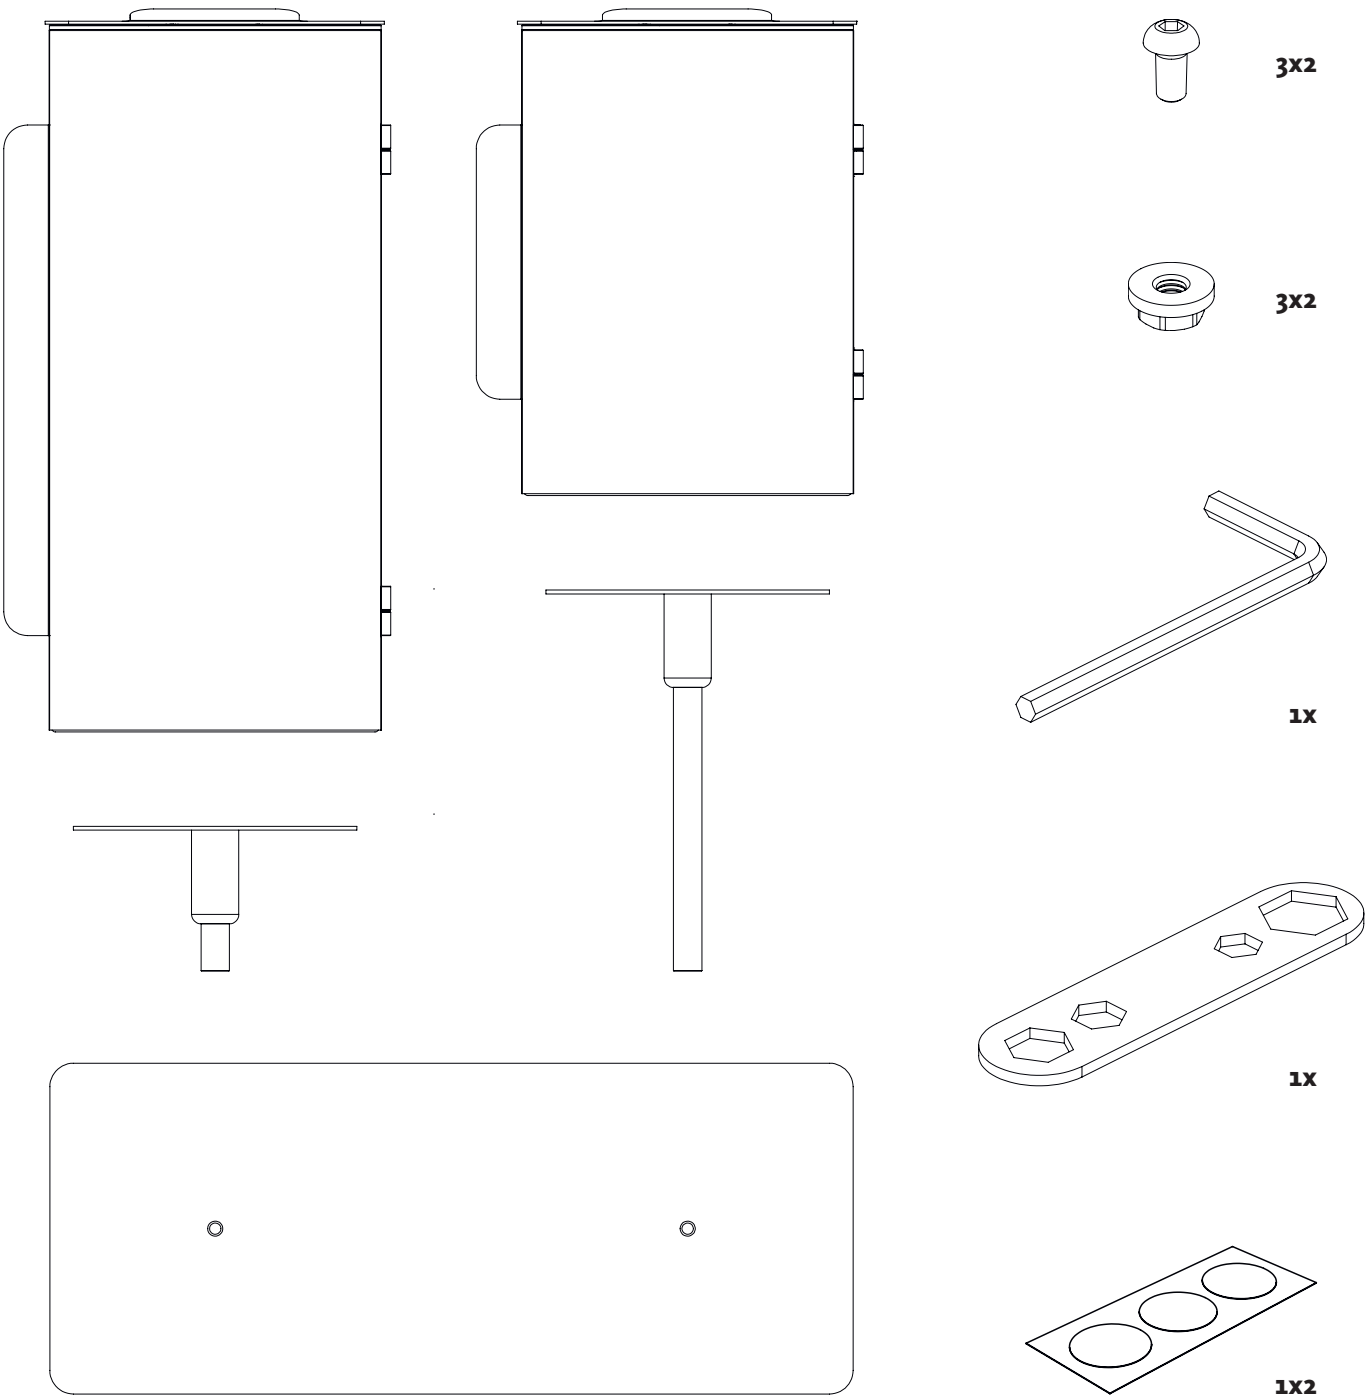

MOUNT HERE


5

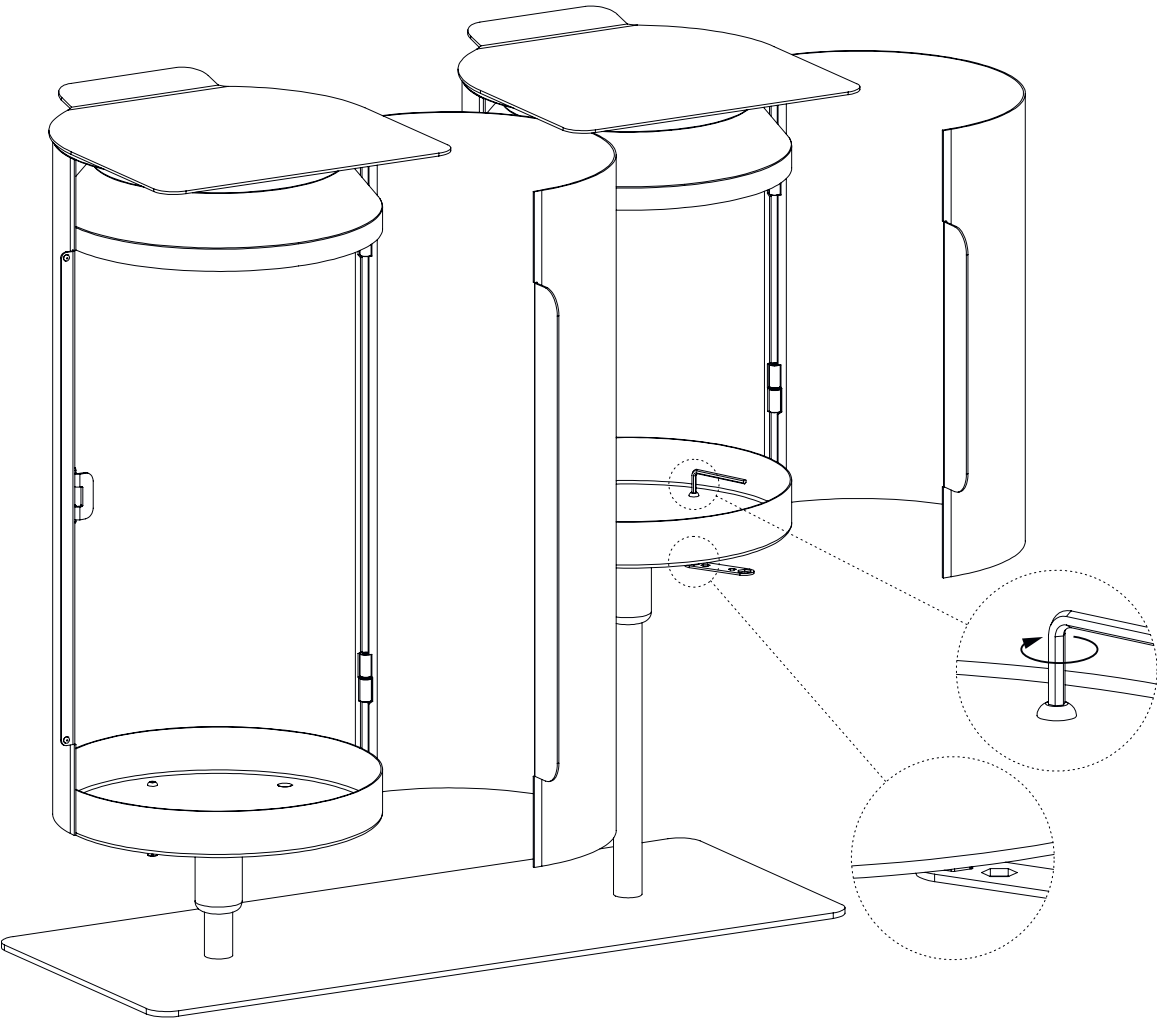

After the bin/bins are centered, tighten all the screws in the base of the bin/bins.

MOUNT HERE


4

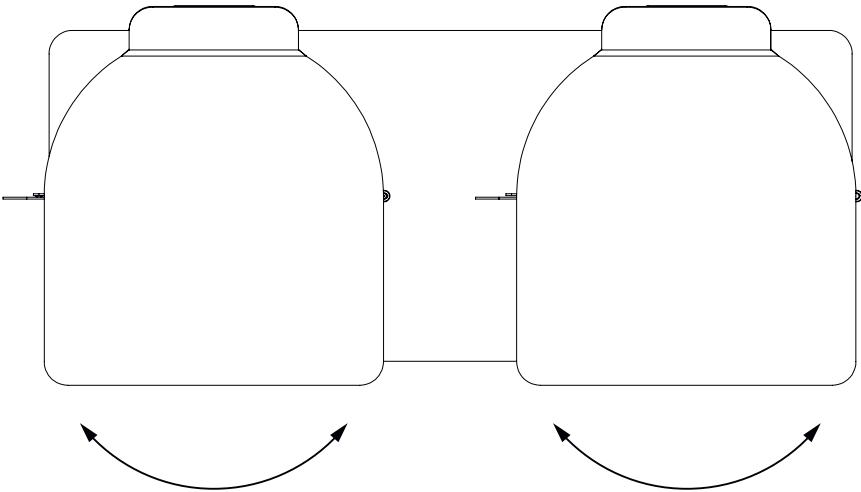

Adjust the bin/bins so that they are centered with the front edges of the lids parallel to the long side of the foot plate.

MOUNT HERE


1

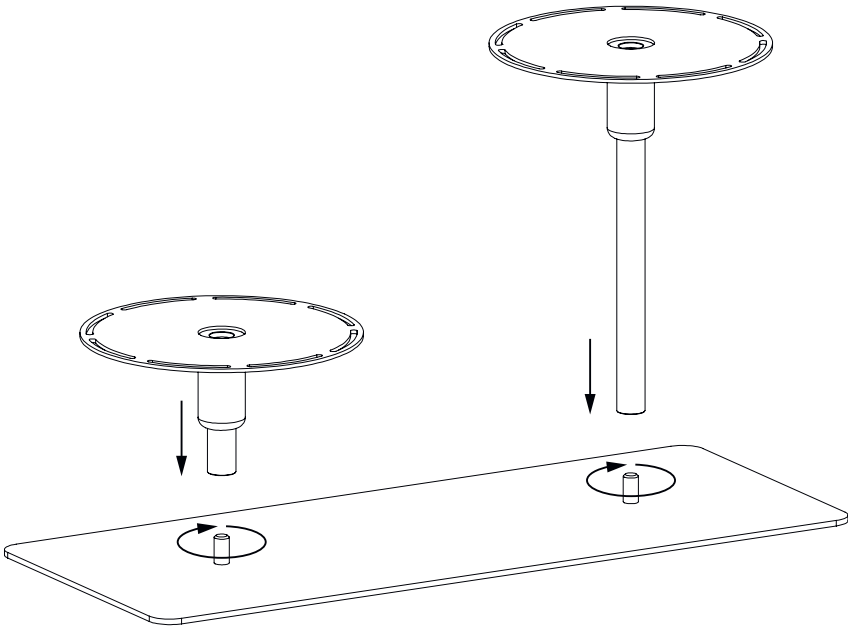

Thread the shaft/shafts onto the pins on the foot plate.

MOUNT HERE


2

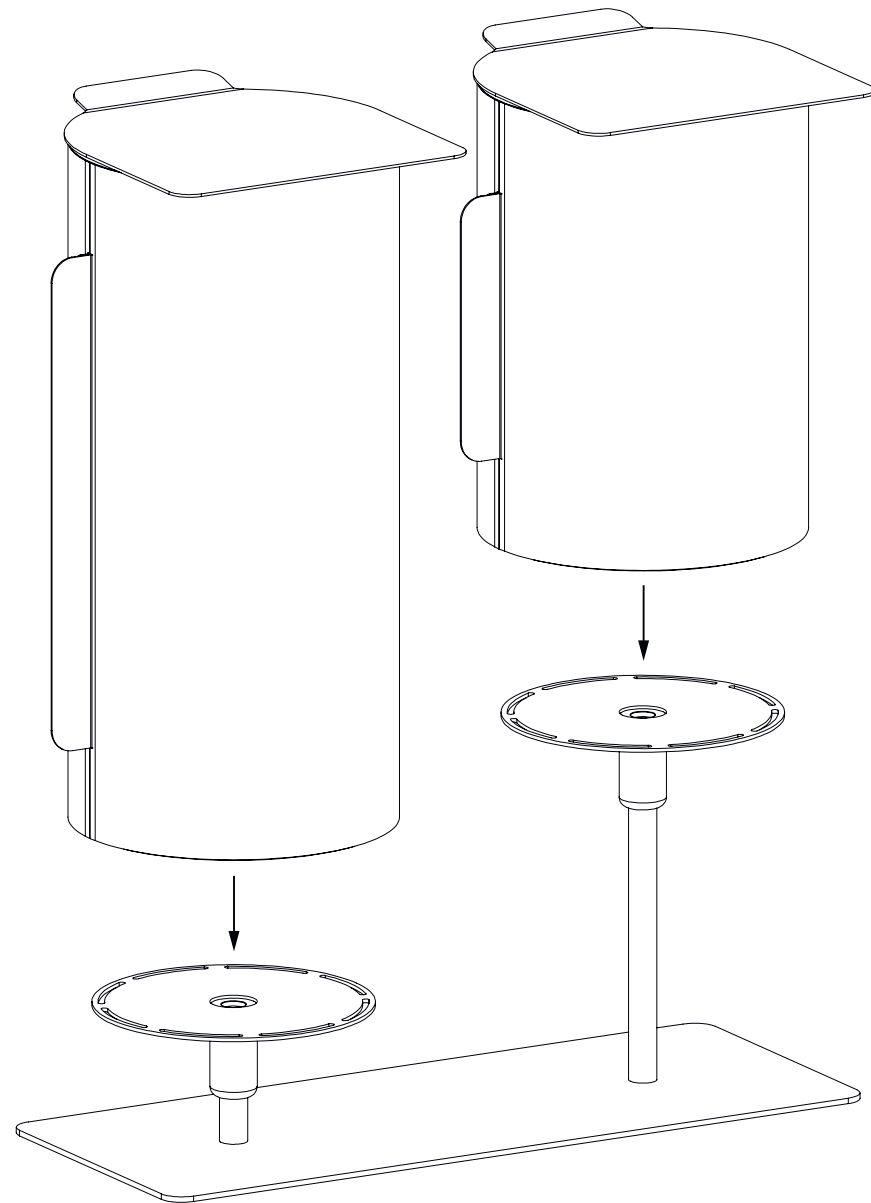

The bin/bins are lifted onto the circular plates at the upper ends of the shafts.

MOUNT HERE

3

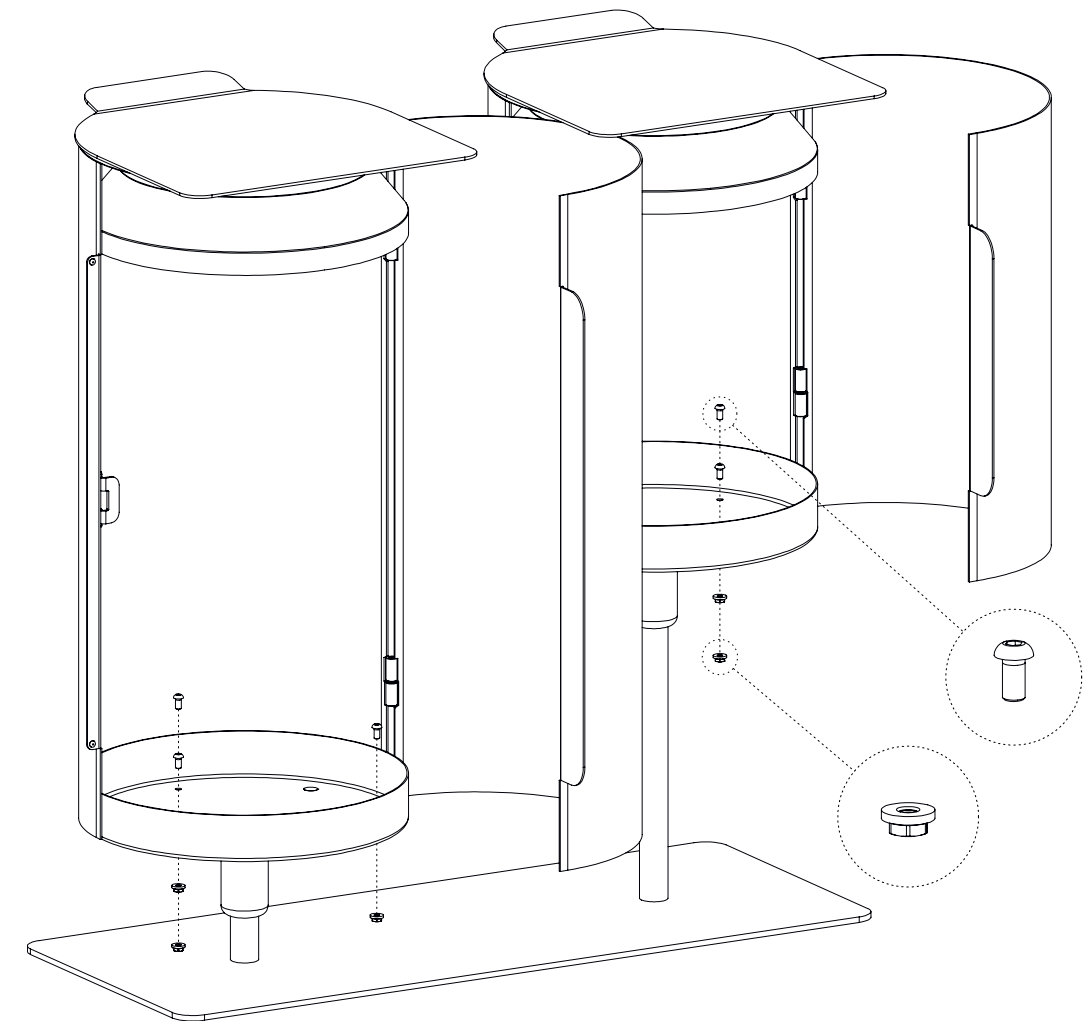

The bin/bins are screwed onto the plates with the supplied screws (3 per bin).
NOTE, the screws should be secured in the position of a triangle for best stability.
The screws should not be screwed in completely.