


MOUNT HERE


10

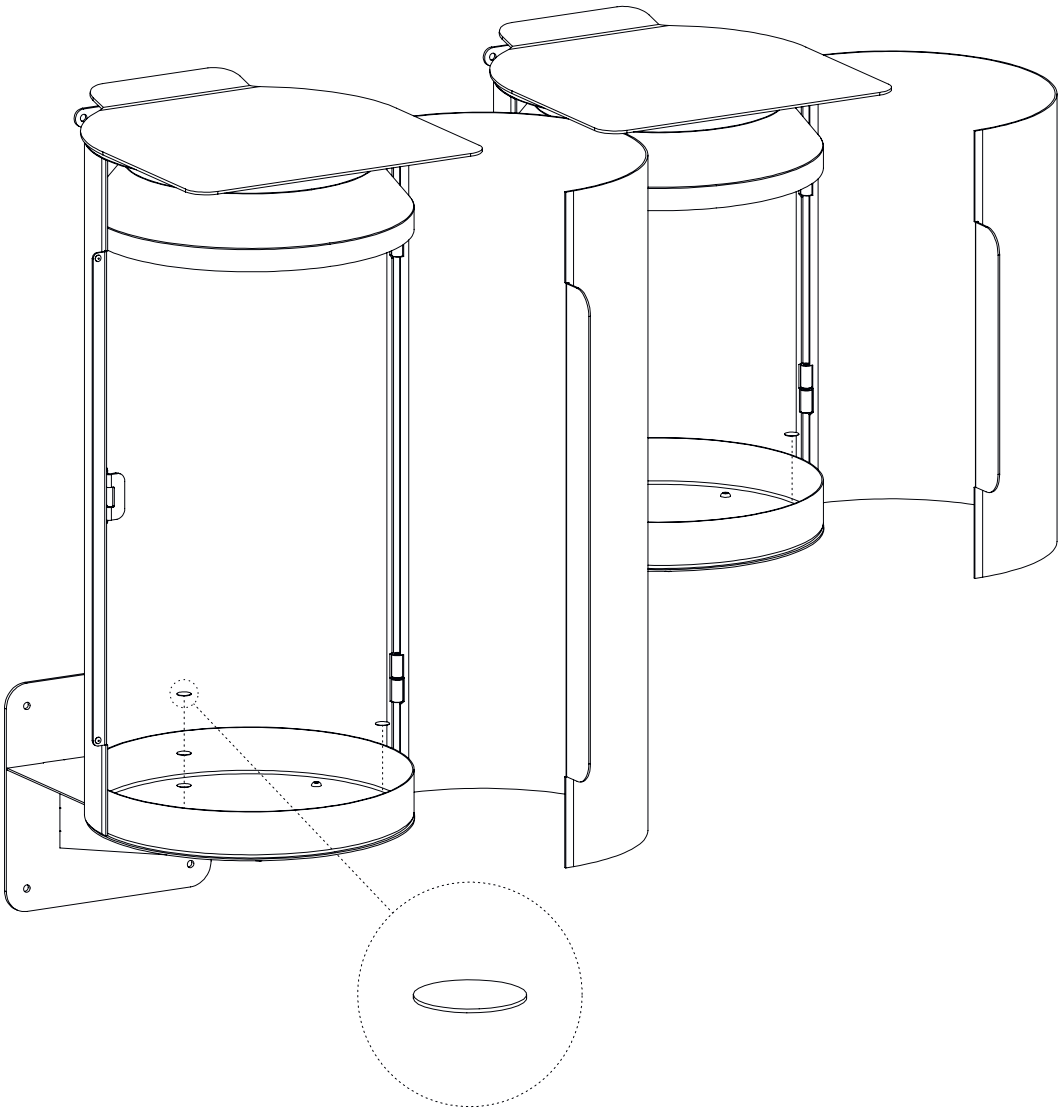

Apply the enclosed waterproof adhesive patches to the base of the bin/bins (3 per bin) over the holes that are not used, for a sealed base.


BIRDIE

WITH WALL MOUNT

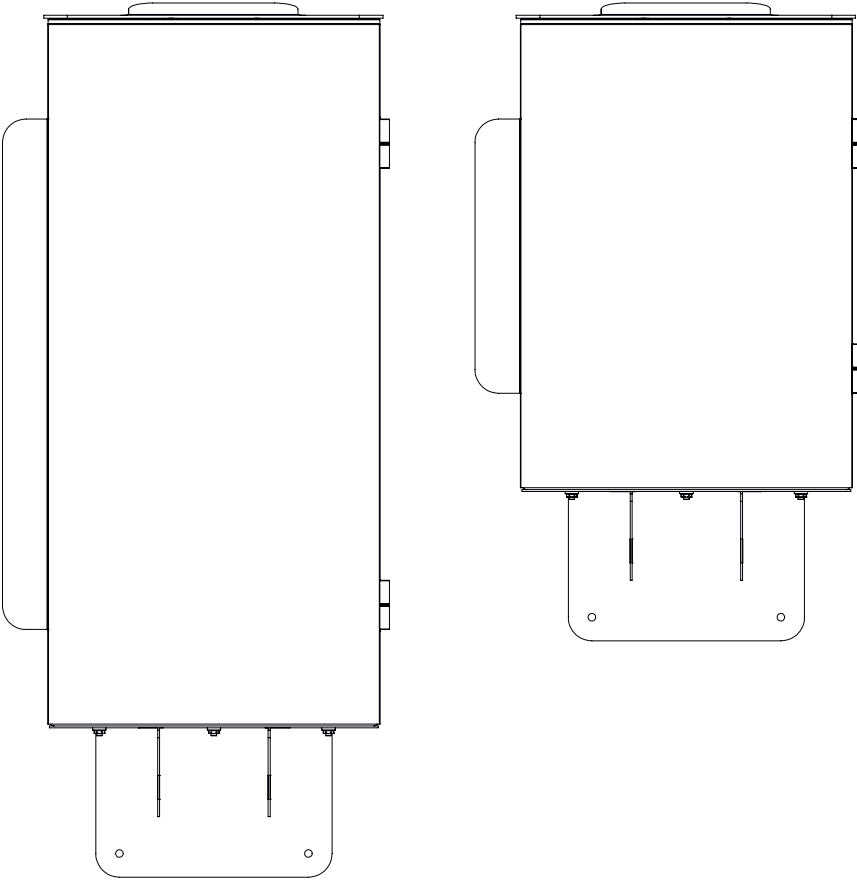

MOUNT HERE


8

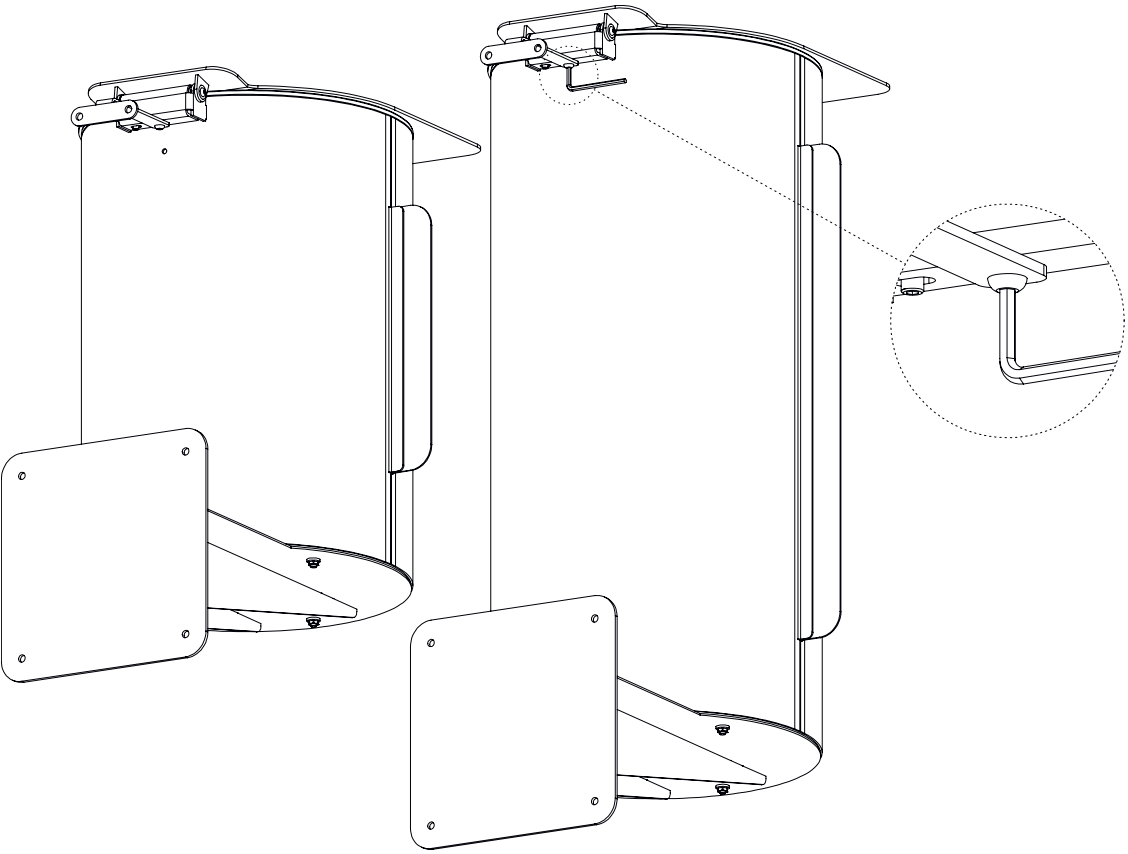

Re-attach the brace/braces to the lower part of the lid's hinge on the back of the bin/bins.

MOUNT HERE


1

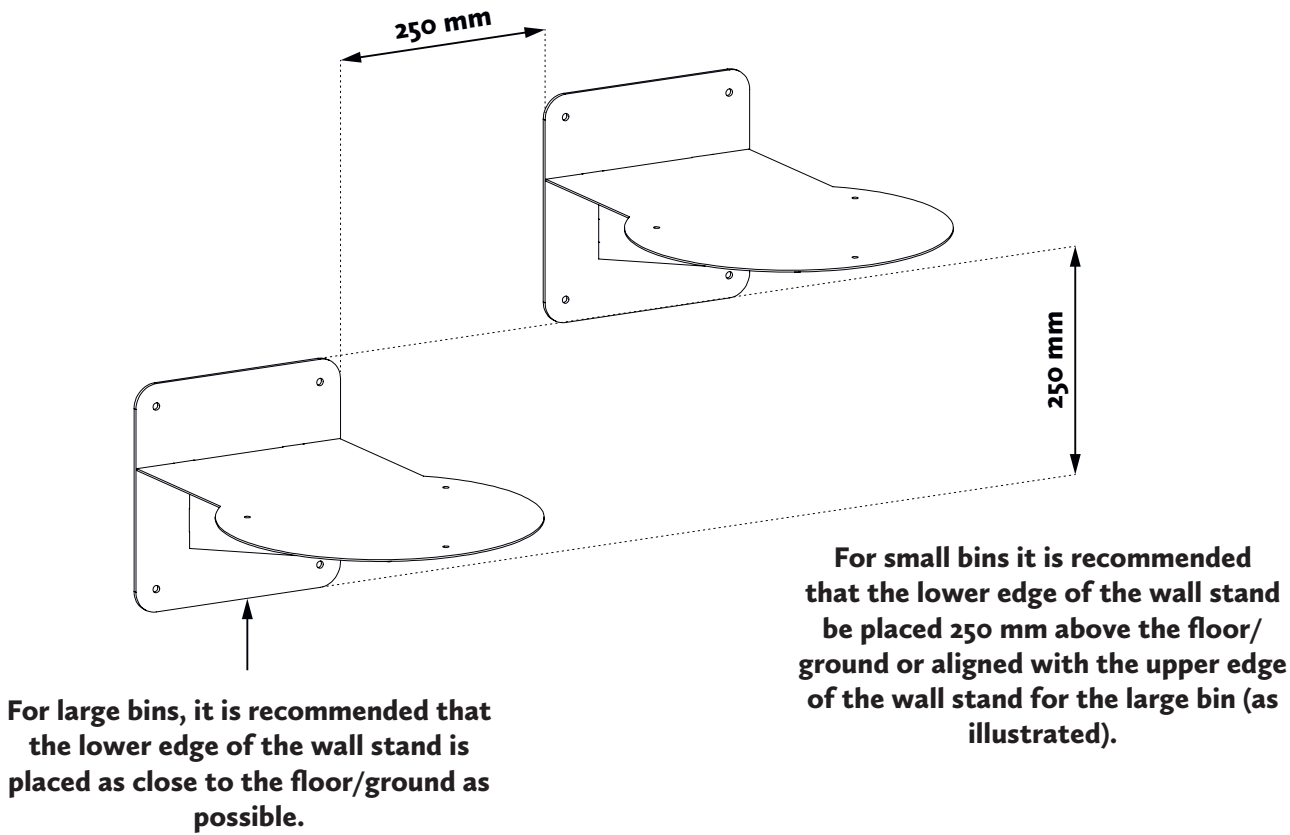

Attach the wall stand/stands to the wall. Recommended placement of large bin and small bin is shown in the illustration. **NOTE! Different wall materials require different types of fixing devices. Use fittings that are suitable for the wall material.**

MOUNT HERE


2

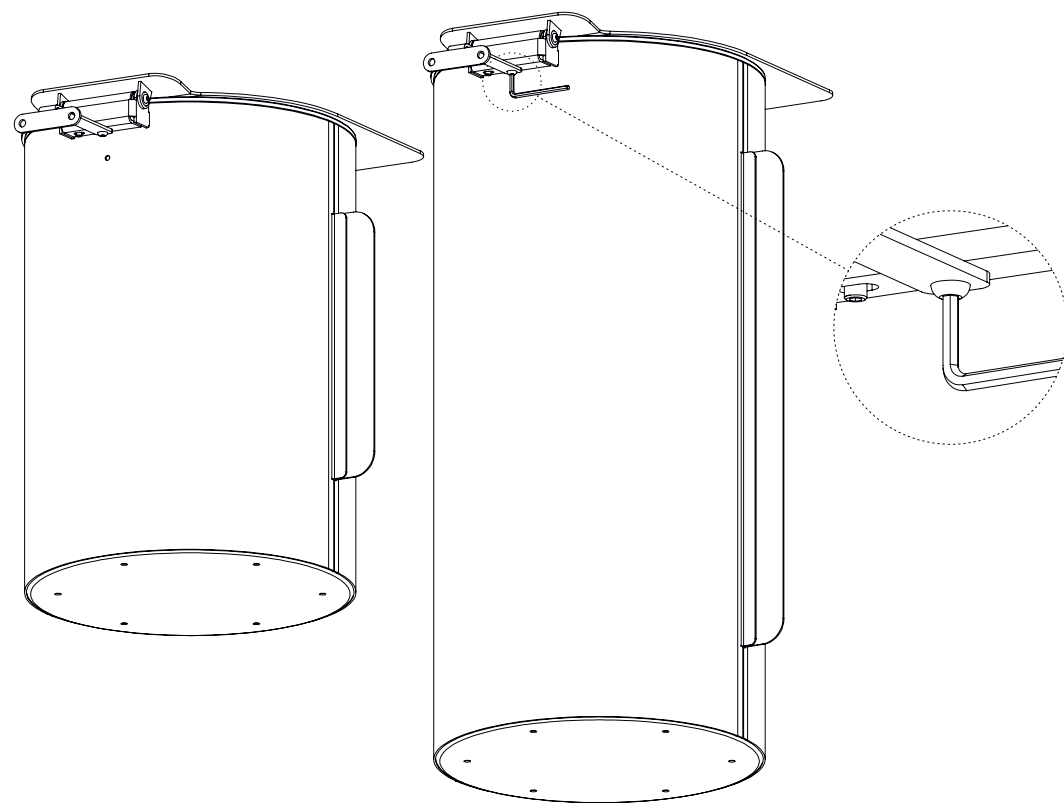

Attach the brace/braces provisionally to the lower part of the lid's hinge on the back of the bin/bins.

MOUNT HERE


7

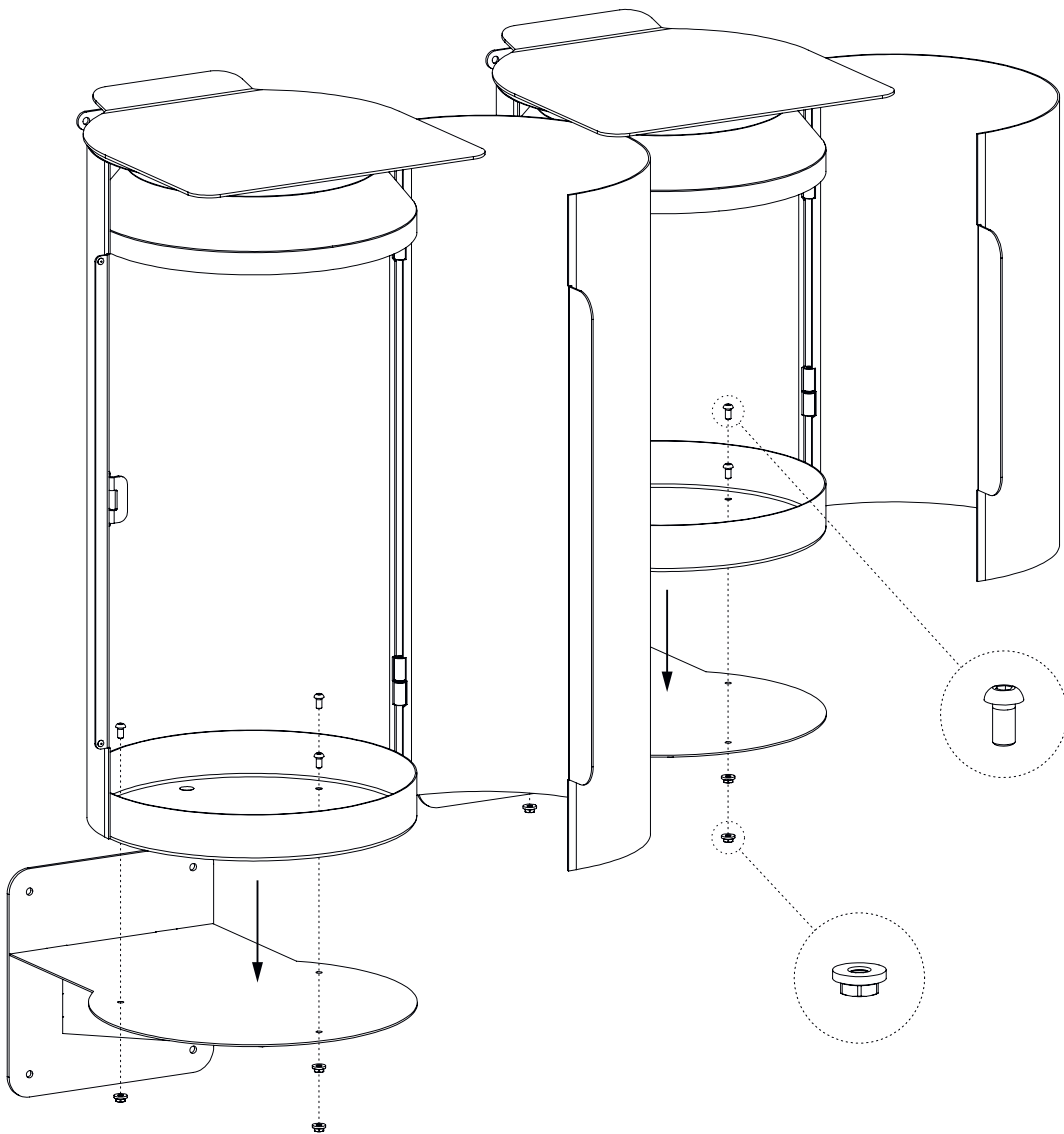

Lift the bin/bins on the wall stand/stands again and then screw 3 screws in each bin.
The screws should not be screwed in completely.

MOUNT HERE


6

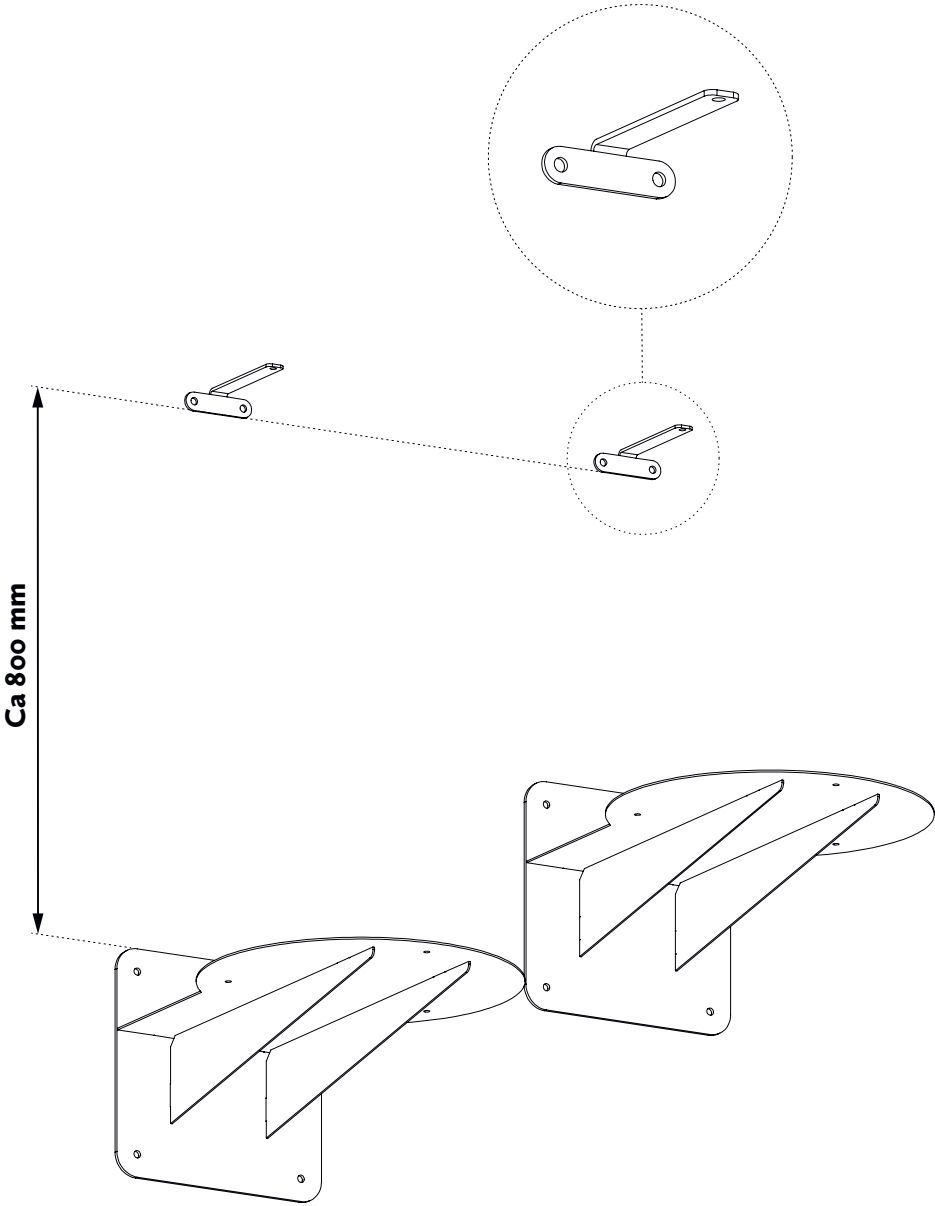

Attach the brace/braces to the wall.

MOUNT HERE


3

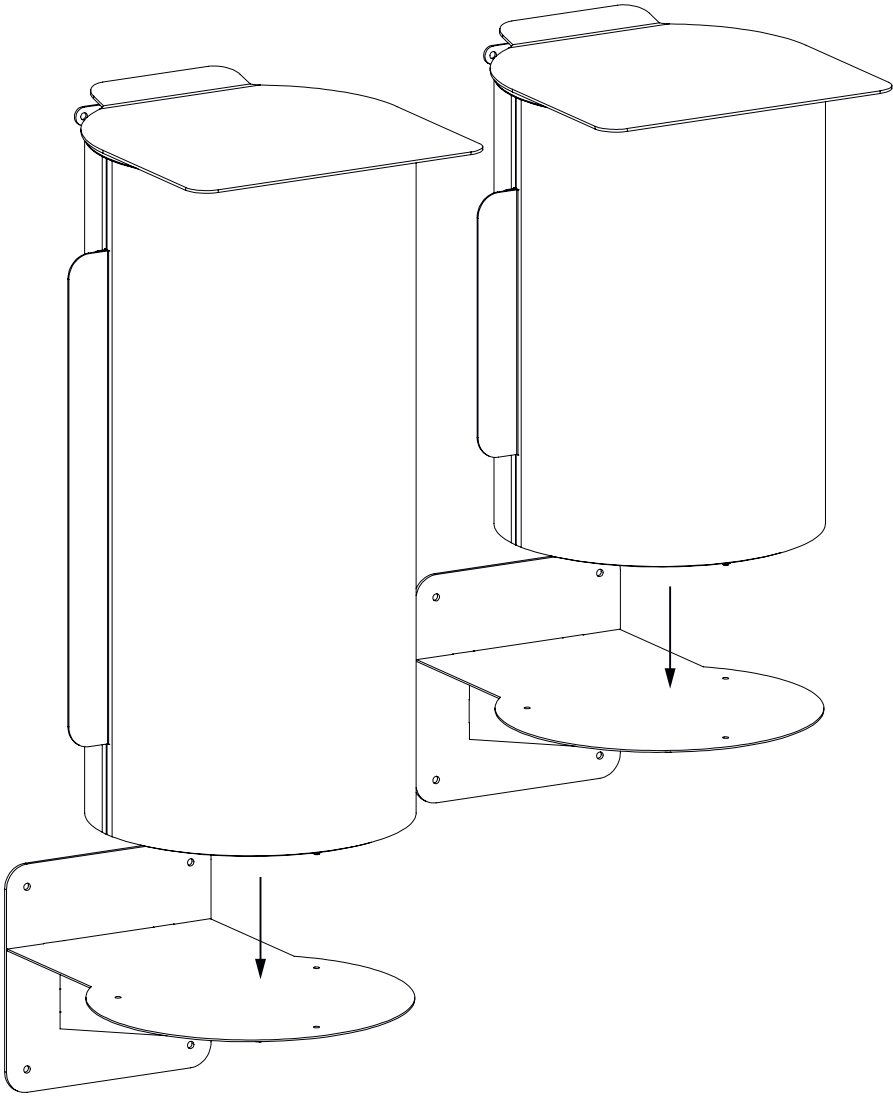

Place the bin/bins on the wall stand/stands.

MOUNT HERE


4

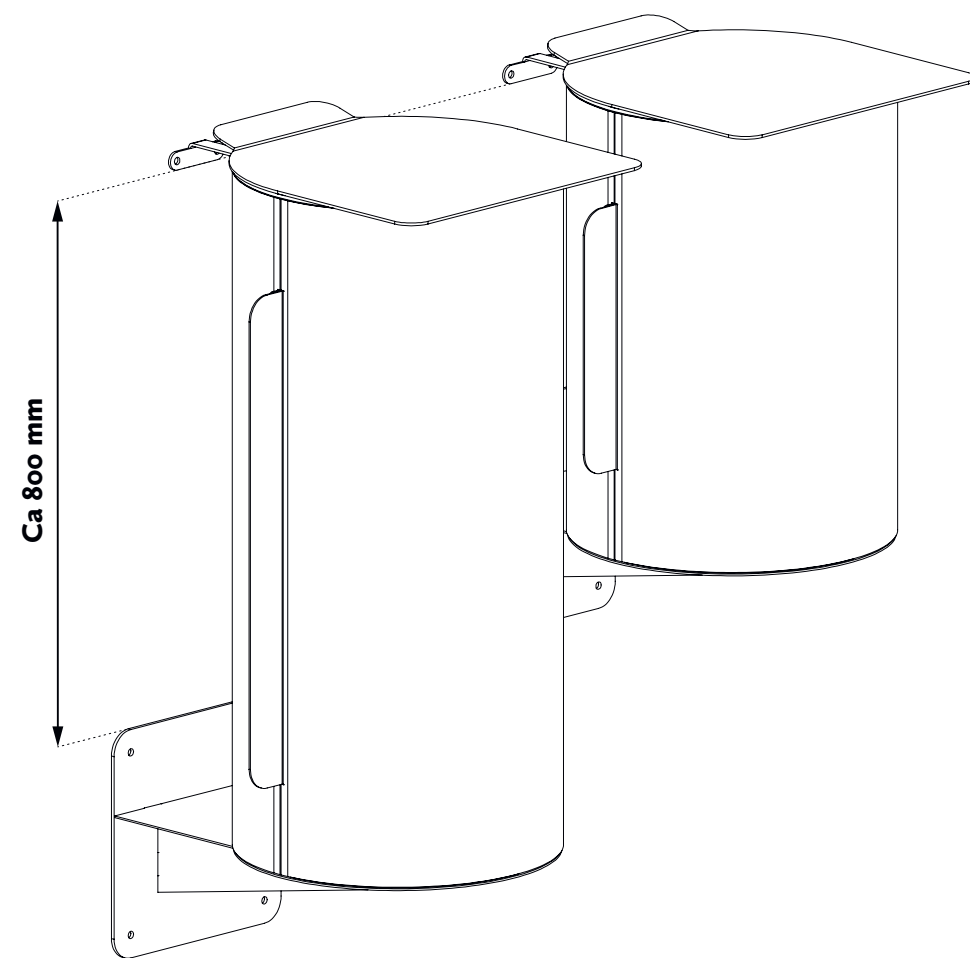

Mark out the height of where the brace/braces should be attached to the wall.

MOUNT HERE

5

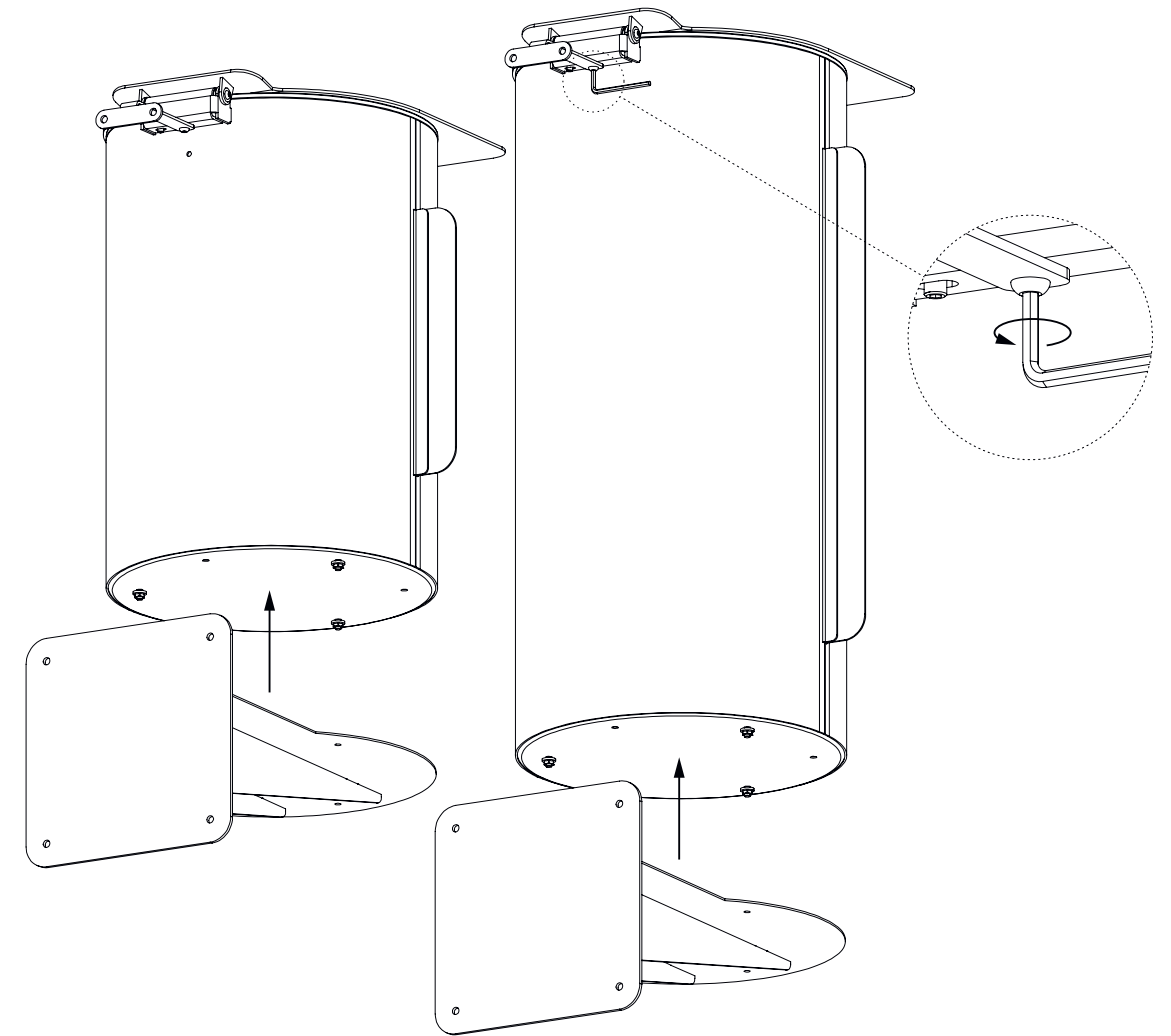

Lift off the bin/bins and remove the brace/braces.